


USE INSTRUCTIONS TILT YOGHURT DISPENSER

Product Name Tilt Yoghurt Dispenser

Code NQ1875_C

General Guidance

- Following cleaning instructions, ensure all parts are clean before first use.
- Craster recommends stirring the product before filling dispenser.
- Refill the dispenser when the product stops dispensing consistently.
- This product is designed to dispense smooth yoghurt. It is NOT suitable for other products.
- As standard, the pump will deliver a 1 fl oz (28.4ml) portion.
- Clean, rinse, sanitise, and dry parts daily or regularly to comply with local requirements.
- Freeze the Freezer Packs for at least 4 hours prior to use. Handle with care when frozen; wear insulated gloves to avoid frostburn.

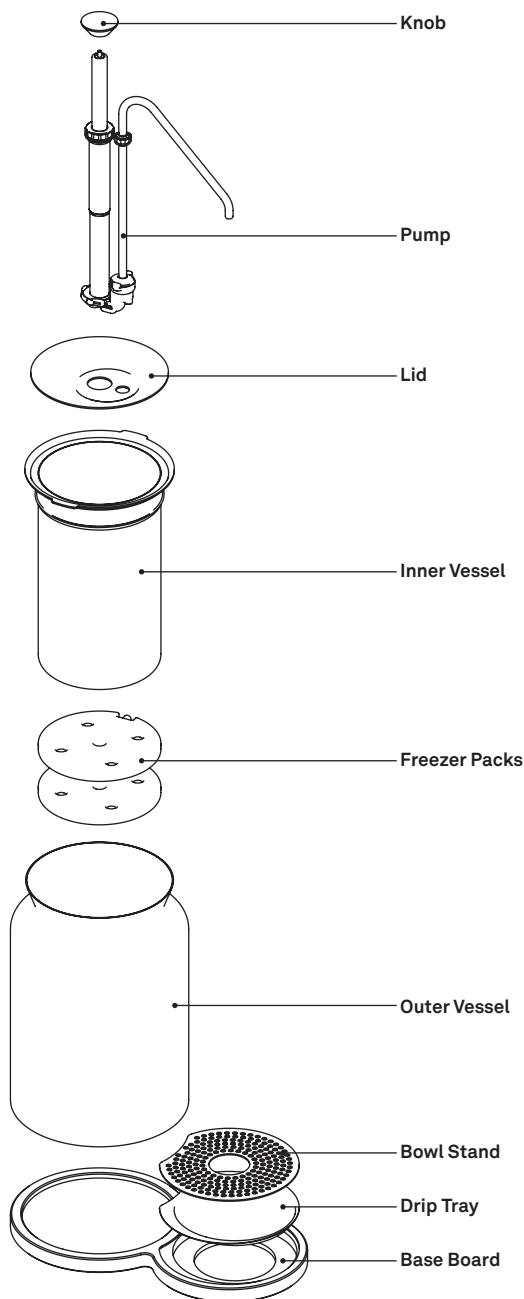

Cleaning Guidance:


The following parts ARE suitable for dishwasher cleaning:

- Knob
- Pump
- Lid
- Inner Vessel
- Bowl Stand
- Drip Tray

The following parts are NOT suitable for dishwasher cleaning:

- Outer Vessel
- Base Board
- Freezer Packs

To clean; wipe with a damp, non-abrasive cloth with mild detergent. Avoid using abrasive, caustic or ammonia based cleansers, as well as products containing acids, alkalines, chlorine or salt. Do NOT use metal scrapers or cleaning pads that could scratch surfaces.

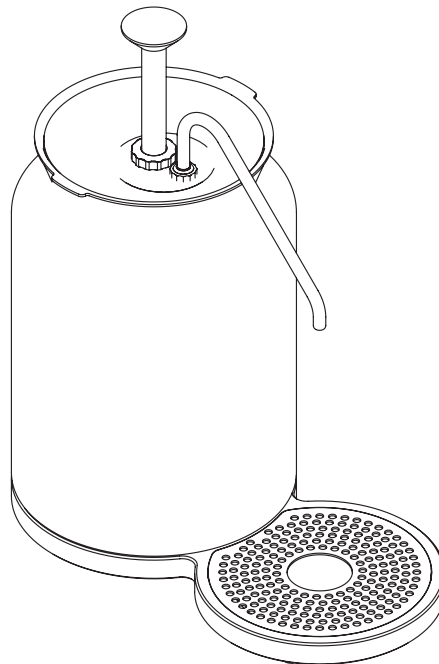

Company Address
 Craster Ltd, Suite 216
 Great Western Studios, 65 Alfred Road
 London W2 5EU


Company Info
 VAT Reg No. 599599046
 Registered in England
 Company No: 4503732

UK Telephone
 +44 (0) 203 004 4750
USA Telephone
 +1 732 543 7862

Email
 info@craster.com
Web
 www.craster.com

PUMP ASSEMBLY FP-101531

The following illustrations were provided by Server Products Inc. Some of the components will differ aesthetically to the illustrations.

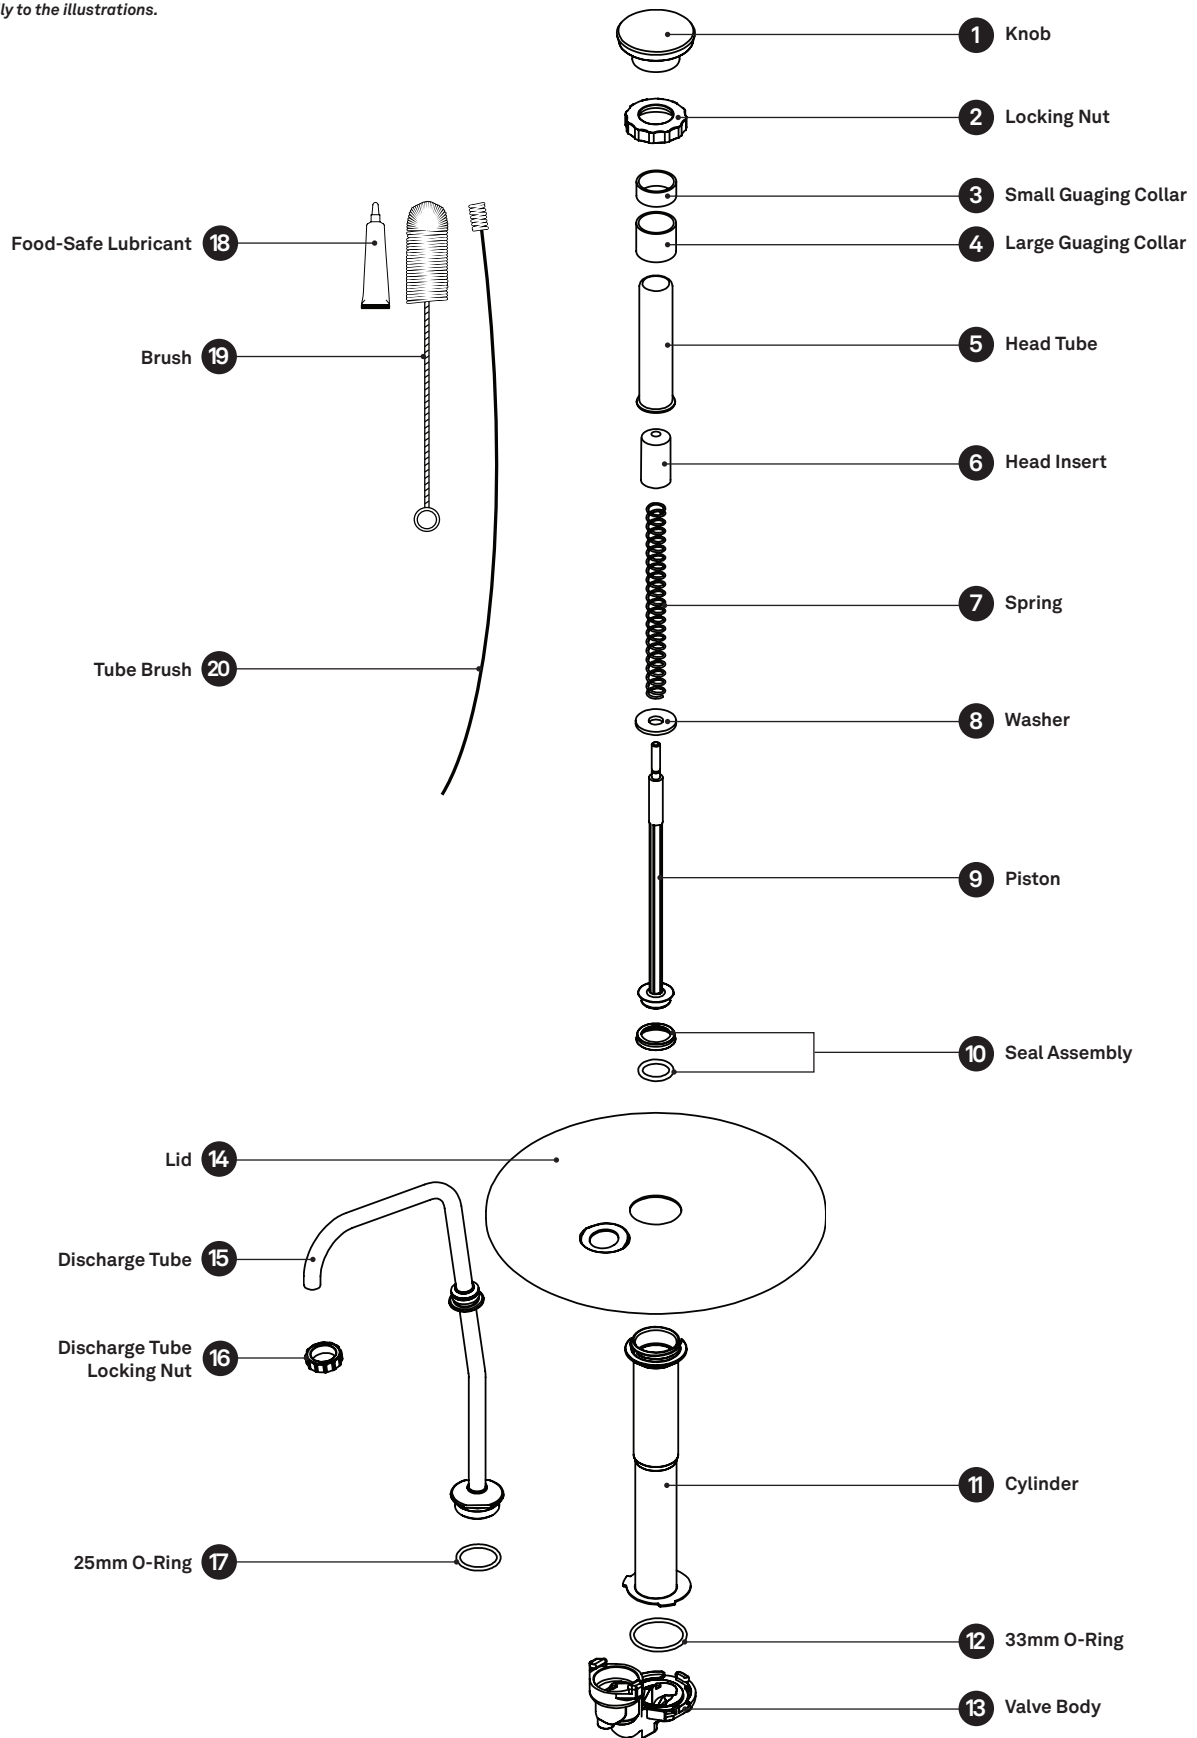

Company Address
 Craster Ltd, Suite 216
 Great Western Studios, 65 Alfred Road
 London W2 5EU

Company Info
 VAT Reg No. 599599046
 Registered in England
 Company No: 4503732


UK Telephone
 +44 (0) 203 004 4750
USA Telephone
 +1 732 543 7862

Email
 info@craster.com
Web
 www.craster.com


PUMP ASSEMBLY FP-101531

The following illustrations were provided by Server Products Inc. Some of the components will differ aesthetically to the illustrations.


1. Before first use, dismantle the pump and properly wash, rinse and sanitise all components. See page 5 for detailed cleaning instructions.
2. Install O-ring into the seal **10**, and install onto the piston head **9**. Apply food-safe lubricant **16** on the outside of the seal. Then slide the washer **8** and the spring **7** onto the piston.

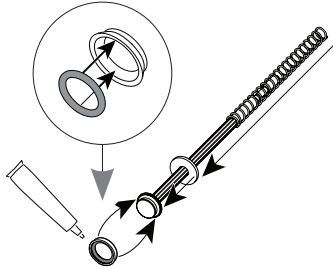


3. Slide the locking nut **2** towards the flared end of the head tube **5**. Slide the head insert **6** into head tube. Then insert the piston assembly into the head tube assembly.

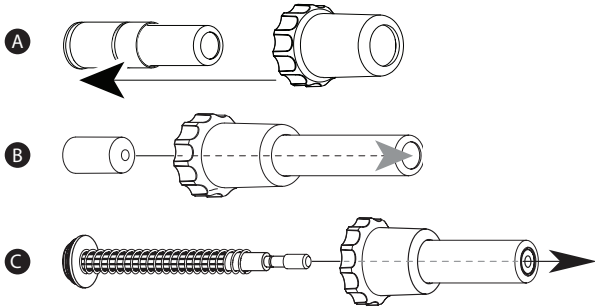

5. Fit the large O-ring **12** into the valve body **13**. Apply food-safe lubricant onto the O-ring.

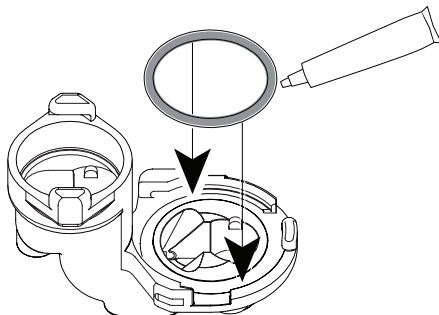


7. Install the medium O-ring **17** onto the discharge tube. Apply food-safe lubricant on the O-ring. Then install the discharge tube onto the valve body.

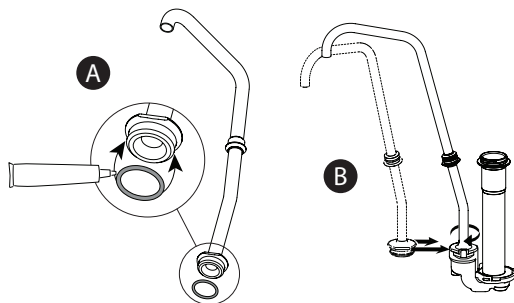


- 3a. This step is only required if you wish to adjust the pump's serving volume.


Add the required gaging collars onto the head tube **5**. Adding the small collar **3** will result in a 1/8 fl oz volume reduction. Adding the large collar **4** will result in a 1/4 fl oz volume reduction. Gaging collars can be used in combination.

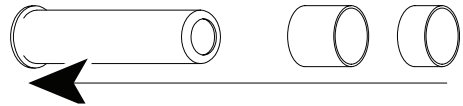


4. To install the knob **1**, press the head tube down to compress the spring and expose the piston threads. Rotate the knob clockwise to secure.

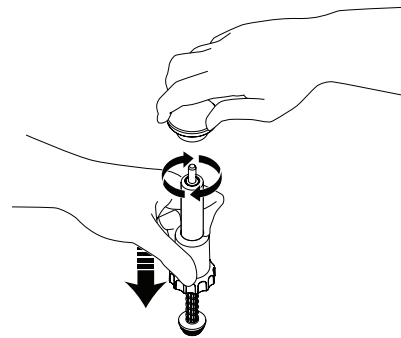

6. Install the cylinder **11** onto the valve body.

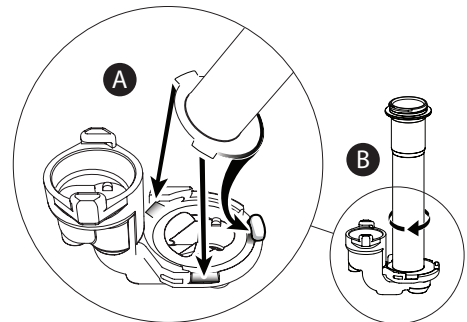

8. Install the lid **14** by sliding the smaller lid hole over the discharge tube and aligning the centre hole with the threads on the cylinder. Secure the discharge tube with the nut. Finally, install the plunger assembly into the cylinder, rotating the locking collar clockwise onto the cylinder threads to secure.

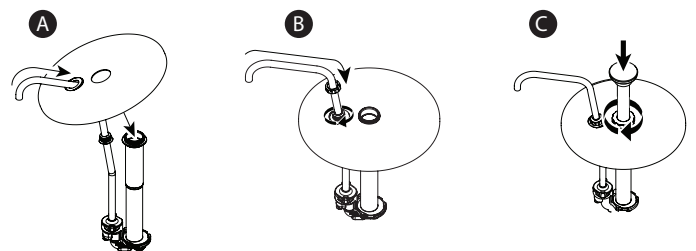

Company Address
Craster Ltd, Suite 216
Great Western Studios, 65 Alfred Road
London W2 5EU


Company Info
VAT Reg No. 599599046
Registered in England
Company No: 4503732

UK Telephone
+44 (0) 203 004 4750
USA Telephone
+1 732 543 7862


Email
info@craster.com
Web
www.craster.com

DISPENSER ASSEMBLY NQ1875_C


1. Place the Drip Tray and Bowl Stand into the front slot of the Base Board.

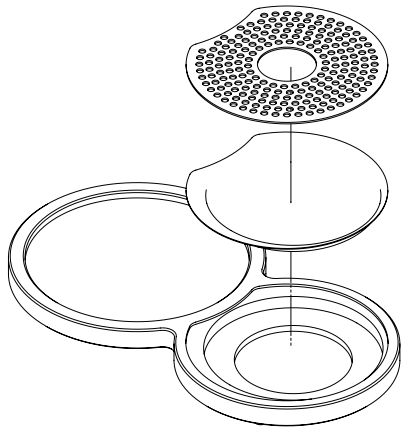


2. Secure the Outer Vessel into the rear slot of the Base Board.

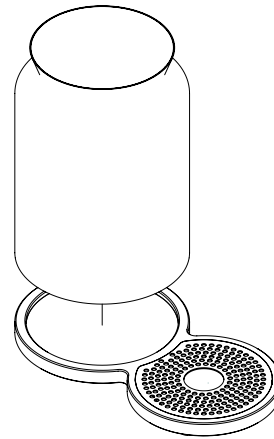


3. Place the frozen Freezer Packs inside of the Outer Vessel chamber.

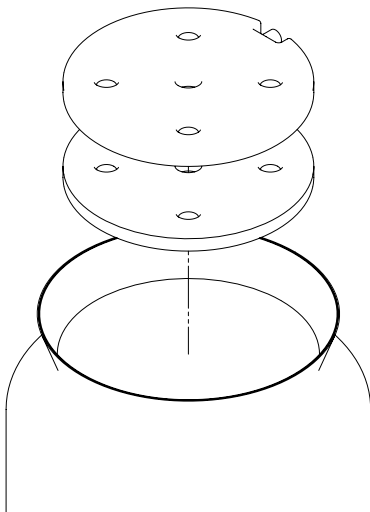


4. Lower the Inner Vessel into the Outer Vessel.

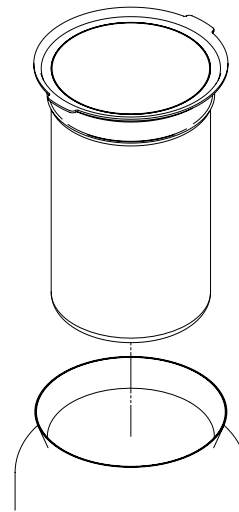

5. Ensure the Inner Vessel tabs are oriented as shown. Then fill with your chosen product.

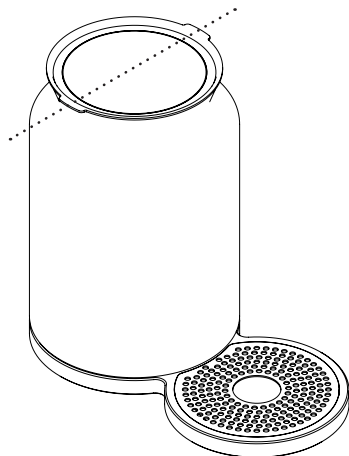

6. Lower the pump and lid assembly into the Inner Vessel. Ensure the end of the Discharge Tube is aligned with the Bowl Stand's central hole.

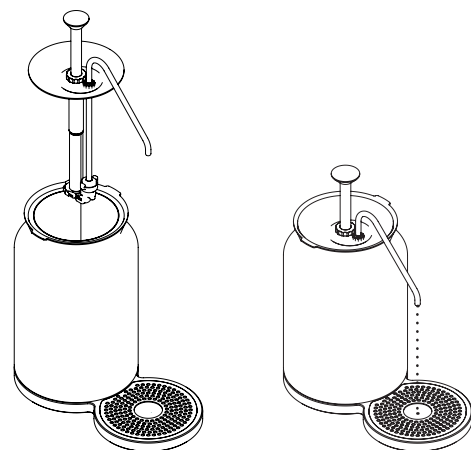

Company Address
Craster Ltd, Suite 216
Great Western Studios, 65 Alfred Road
London W2 5EU

Company Info
VAT Reg No. 599599046
Registered in England
Company No: 4503732

UK Telephone
+44 (0) 203 004 4750
USA Telephone
+1 732 543 7862

Email
info@craster.com
Web
www.craster.com

PUMP CLEANING & MAINTENANCE FP-101531


The following illustrations were provided by Server Products Inc. Some of the components will differ aesthetically to the illustrations.

Clean-In-Place

1. Pump out any remaining yoghurt inside the pump body. Wash and rinse the inside and outside of the pump.
2. Place the lower end of the pump into a container full of warm water and dishwasher detergent. Operate the pump until all remaining product is expelled and only warm water flows from discharge tube.


To sanitise the pump, replace dishwasher detergent with your chosen sanitiser.

3. Replace the cleaning mixture with hot water and operate the pump until all water is expelled. Leave parts to air dry.

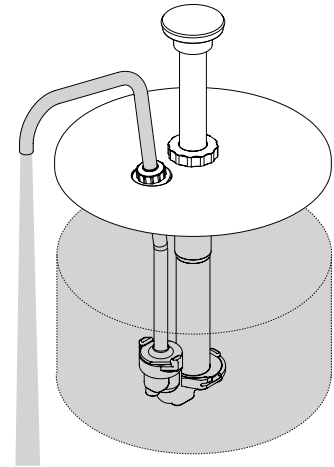

Cleaning

- To keep the pump safe and in good working order, it is important to clean, rinse, sanitise, and dry parts daily or regularly.
- Both the pump and knob are suitable for dishwasher cleaning.
- More thorough cleaning can be conducted with the pump disassembled, using the brushes provided. See the below illustrations for direction.

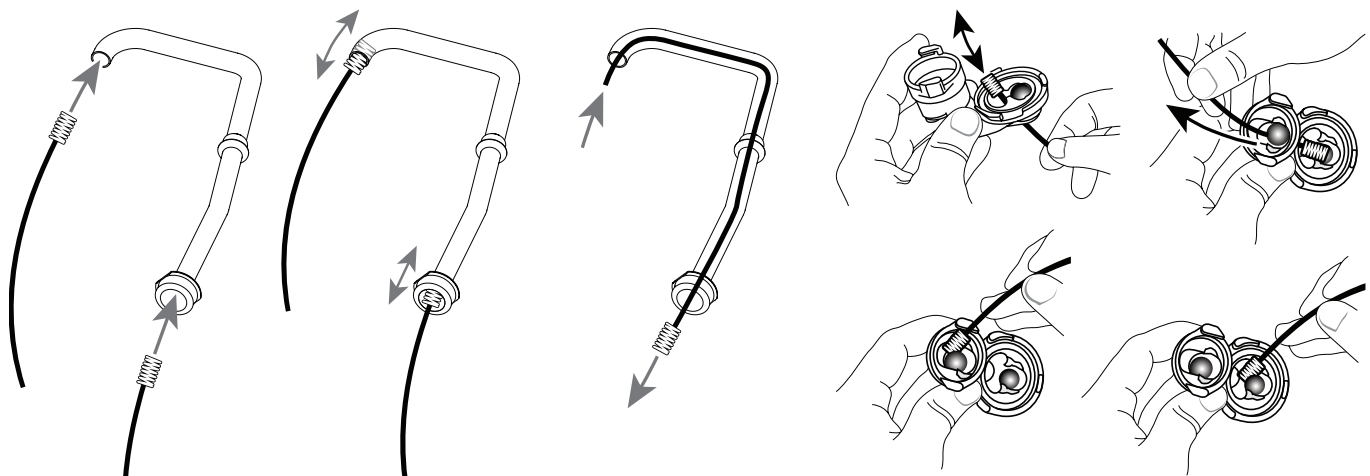

Troubleshooting

Problems with flow or portions:

- Clean the pump.
- Yoghurt may be too thick or contain a solid that cannot pass through the pump.
- If used, ensure the gaging collar(s) are undamaged and properly installed.

Plunger not returning to top after dispensing:

- Ensure that the spring is functional. Replace if broken.
- Ensure that the washer is installed between the spring and piston head.

Pump is dripping:

- Yoghurt may be too thin.
- Thoroughly clean the discharge tube with the supplied tube brush.
- Inspect all o-rings and replace if damaged.

Yoghurt oozes out around locking collar:

- Ensure seal is properly installed on the piston. This has a slight taper; ensure this is installed with the flat side facing upwards and the flared side downwards.

Company Address
Craster Ltd, Suite 216
Great Western Studios, 65 Alfred Road
London W2 5EU

Company Info
VAT Reg No. 599599046
Registered in England
Company No: 4503732

UK Telephone
+44 (0) 203 004 4750
USA Telephone
+1 732 543 7862

Email
info@craster.com
Web
www.craster.com