





A Filler Panel MUST be used alongside the Fare Drop-In Ice Well. These panels are made from an MDF core, with a double-sided HPL surface and ABS edging.

Fare Filler Panels come in three sizes - Please consult this guide to ensure that the correct size Filler Panel is purchased:

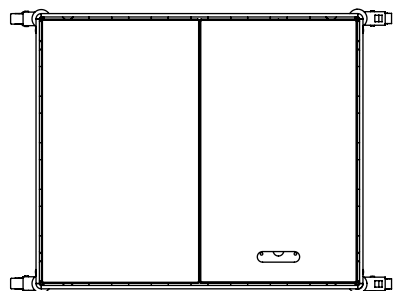



For a single Ice Well in a Fare 2.1 Trolley, use:

TO_MOD_FP21LAM12

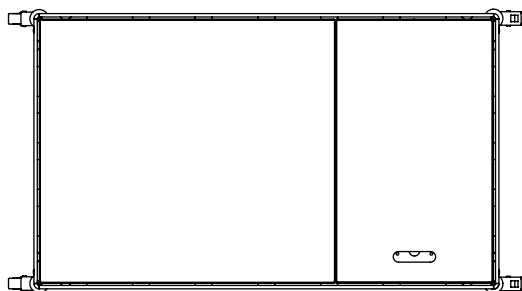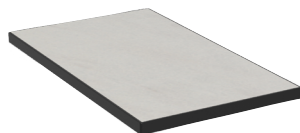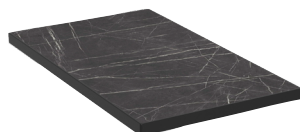

For a single Ice Well in a Fare 3.1 Trolley, use:

TO_MOD_FP31LAM23

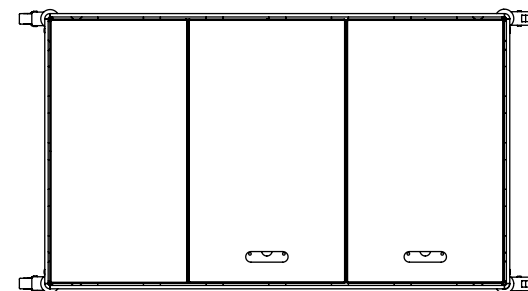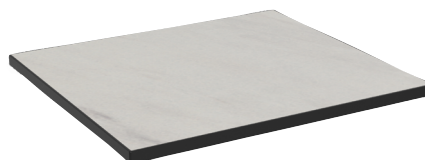

For a pair of Ice Wells in a Fare 3.1 Trolley, use:

TO_MOD_FP31LAM13

